



- Nothing is coming out of my scent machine, what do I do?
 - Potential fixes:
 - Start machine and set switch for one of the scents
 - Hold your finger over the tip on the gun. Push the gun button and hold it for 30 seconds – 1 minute.
 - Look for bubbles in the scent bottle
 - After 30 seconds or when bubbles are seen in the scent bottle let go of the tip and continue to hold the button.
 - Hold until product comes out