

- My machine goes on & off or won't turn on, what should I do?
  - Potential fixes:
    - Check coin mech wires to micro switch
      - Make sure they are on 'com' and 'n.o.' not 'n.c.'
    - Check the timer and make sure it is set properly
    - If machine won't go on at all, check the power source
    - Check the relay