



- How come there is no suction from the vacuum?
  - Potential fixes:
    - Open clean out door and verify the round black plugs are plugged into internal mounting system
    - Are motors turning? Does it draw your hand down when placed on top? Check for loose bolts.
    - Is vacuum hose hooked up properly?
      - Check hose for holes or splits and clogs
    - Check door and motor gaskets