

Models- 9217, 9218 Coin Operated & 9237 Push button

Dual and Single Hose, Post Mount Vacuums

Page 2 Product Information

Page 3-4 Product Dimensions

Page 5 Specifications

Page 6 Important Safety Instructions

Page 6-8 Installation

Page 9-10 Programming

Page 11 Operating

Page 11 Maintenance

Page 12 Troubleshooting

Page 13-20 Parts List

Page 21-24 Wiring Diagram





PRODUCT INFORMATION

Please take a moment to fill out the information below in order to aid us with any future sales or service inquiries. Model number and serial number information can be found on the serial tag located inside the control box and/or on the lower exterior of the can. Key number can be found on the tag that comes attached to the keys. There may be more than one key number depending on unit.


Please keep this information with your records.


MODEL#:	
SERIAL#:	
KEY NUMBER(S):	
DATE PURCHASED:	
DISTRIBUTOR:	

J.E. Adams Industries 1025 63rd Ave. S.W. Cedar Rapids, IA 52404 1-800-553-8861


www.jeadams.com

PRODUCT DIMENSIONS

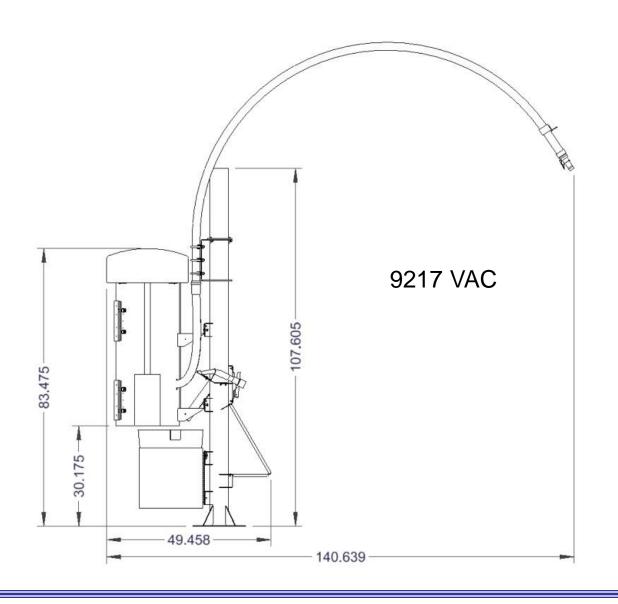

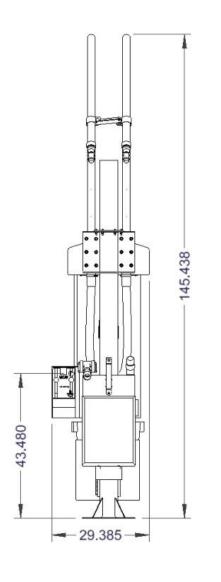

PRODUCT DIMENSIONS

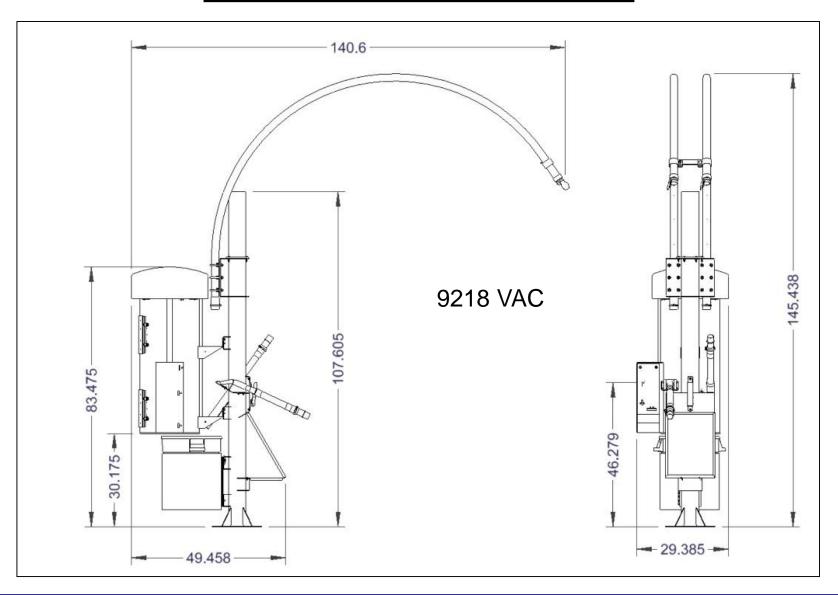

Specifications

Unit specifications: 3 MOTOR VACUUMS, 120VAC

Voltage: 120vac, 60hz

Amperage: (1) 30 amp service is required for this unit.

Weight: 140lbs with pallet attached.

Vac specifications:

Motors: (3) 120vac vacuum motors. Fuses: (3) 10 amp inline fuses.

Unit specifications: 3 MOTOR VACUUMS, 220VAC

Voltage: 220v, 50/60hz

Amperage: (1) 20 amp service is required for 3 motor units.

Weight: 140 lbs with pallet attached.

Vac specifications:

Motors: (3) 220vac vacuum motors . Fuses: (3) 8 amp inline fuses.

Stainless steel or lighted dome options.

Push button or coin operated start.

Single hose or dual hose inlets.

Duty cycle time 4 minutes on, 4 minutes off.

NOTE: "UNIT INTENDED FOR COMMECIAL USE ONLY"

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE)

WARNING – To reduce the risk of fire, electric shock, or injury:






- Do not use on wet surfaces.
- Use only as described in manual. Use only manufactures recommended attachments.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.

SAVE THESE INSTRUCTIONS

- Installation Instructions:
- Determine location to mount unit ("DANGER" "THIS EQUIPMENT INCORPORATES PARTS SUCH AS SWITCHES,
 MOTORS, OR THE LIKE THAT TEND TO PRODUCE ARCS OR SPARKS THAT CAN CAUSE AN EXPLOSION. WHEN
 LOCATED IN GASOLINE-DISPENSING AND SERVICE STATIONS INSTALL AND USE AT LEAST 20 FEET (6 M)
 HORIZONTALLY FROM THE EXTERIOR ENCLOSURE OF ANY DISPENSING PUMP AND AT LEAST 18 INCHES (450
 MM) ABOVE A DRIVEWAY OR GROUND LEVEL."
- Run electrical service to that location (NOTE UNIT HAS WIRE PROVIDED UNDERNEATH TO CONNECT INCOMING POWER SUPPLY)
- **Grounding Instructions**: This appliance must be connected to a grounded metal, permanent wiring system; or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the appliance.
- Circuit must be protected by GFCI device.
- All local and national electric codes must be followed for installation and use.
- Licensed electricians are recommended for installation.

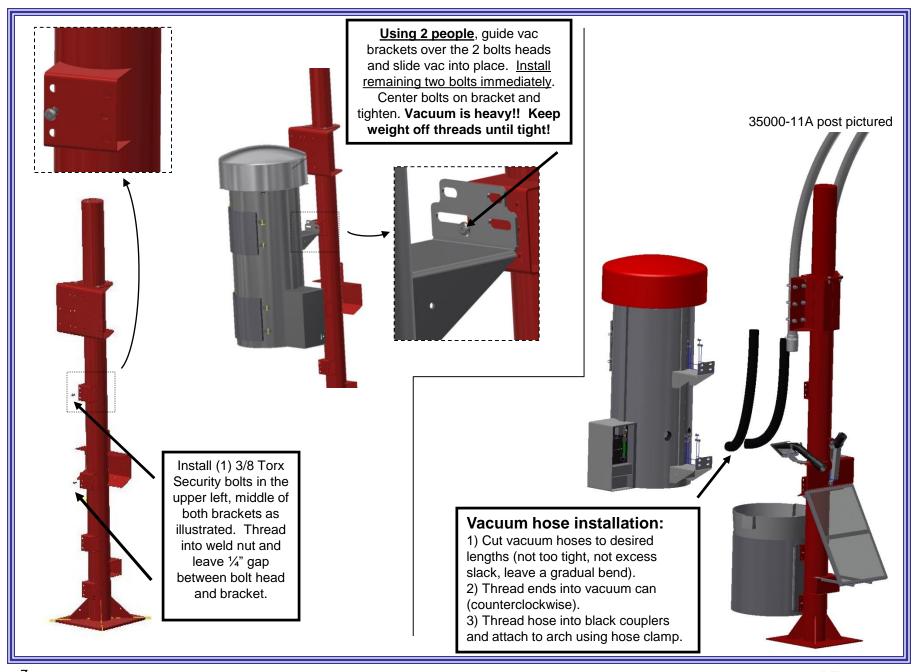




Remove cover and make conduit connection at hole provided (seal tite type fitting not provided). Tie into factory electrical at this location.




To make a dual inlet vacuum into a single inlet attach 8619-6 cover by loosening both inlet screws. Hook slotted end of cover under upper screw and rotate cover. Tighten screws, *careful not to overtighten*. This cover can be applied to either inlet.

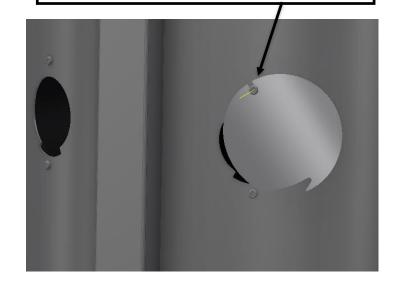

Programming (SSAC OR TPCR TIMERS):


JE Adams post mount vacuums come with non accumulating timers. If offering a free vacuum with a push button start, number of coins will be set to 1. If using a coin mechanism, select whatever combination of coins from 1-15 quarters. A typical vend time would be 4 minutes (240 seconds) which requires dip switches 3.2 and .8 to be set to "on." Again, since this a non accumulating timer, there is no calculation for time per coin.

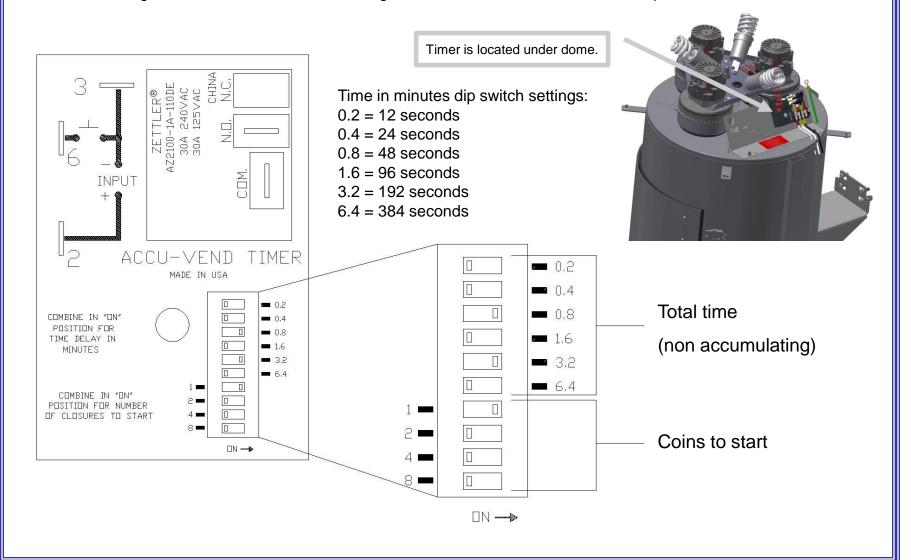


Programming (JEA Timer):

JE Adams post mount vacuums built mid 2022 will use JE Adams timer. When using in paid vend situation select mode, "ACM" for accumulating or "NON ACM" for non-accumulating (bottom dip switch under "coins"). For a non-accumulating function machine will run for total of seconds selected under "Seconds" switches and will start once "Coins" value is inputted by user through pay methods. If extra money is added while machine is running it will not add time. If choosing to run in Accumulating mode, set time for unit to run <u>PER COIN</u> not total time, then set for number of coins to start. In accumulating mode if money is added while machine is running extra time will be added. If machine is free vend start/stop switches are connected to "free" and "stop" ports on timer and unit will only run in non-accumulating mode for time set.

Any time switch settings are changed on timer, timer must be powered off for minimum of 10 seconds for changes to take effect.

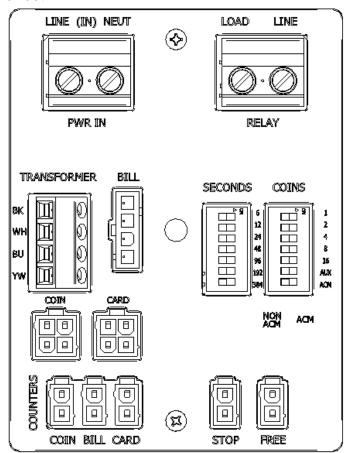

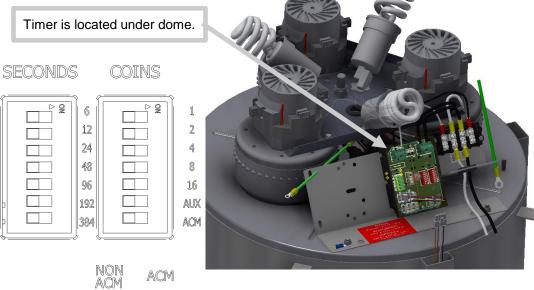

Example setting for, accumulating function with \$2.00 to start (8 quarters) for 4 minutes of run time 4X60 secs. = 240 seconds / 8 coins = 30 seconds per coin.

Move "8" on COIN switches to the right, bottom "ACM" switch to the right.

Move "24" and "6" on SECONDS switches to the right. = 30 seconds

Bill acceptor:

Bill acceptor comes pre programmed from J.E. Adams and should not require any changes. If additional programming is needed to acceptors please refer to additional literature sent along with this unit.

Operating Instructions:

- Insert coin(s) into machine to start.
- In the case of a push button kit, press push button to activate machine. It will automatically shut off.
- Remove vacuum hose from hanger and vacuum subject accordingly. Do not vacuum wet objects or fine dust (ex
 – drywall dust).
- Return vacuum hose to hanger when finished.
- In the case of a dual hose model, hose claw must be returned to hanger and set against rubber pad to eliminate leaks in vacuum system. This will allow the opposite hose to have more suction while in use.

Maintenance:

- All servicing of machine should be conducted by an authorized service representative!
- Filter bags should be accessed and shaken down weekly. It is recommended to keep a new set of bags on hand.
- To maintain performance, empty dirt bin from the canister on a regular basis. This is very important!!
- Periodically inspect wires and connections for wear or fatigue.
- Check vac hose for cracks on a weekly basis.
- Clean canister with a stainless steel cleaner as needed. Decals can be cleaned with mild soap and water.
- Check motor brushes approx. every 3 months for excessive wear. Motor brushes should be changed if they are shorter than 3/8". *Please disconnect power before doing this.*





DISCONNECT POWER BEFORE SERVICING OR TROUBLESHOOTING!





Troubleshooting: !DISCONNECT POWER BEFORE SERVICING OR TROUBLESHOOTING!


Problem	Possible cause	Solution
Unit is not powered.	Breaker inside fuse panel is not in the on position.	Turn breaker on.
	No power to machine.	Check incoming power line voltage.
	Loose connection.	Check incoming power connection.
Machine is behaving	Is the incoming power at 120V?	Check voltage and monitor while machine runs.
erratically.		Low voltage can cause erratic behavior.
	Are any of the machines wires worn through or connections	Inspect wiring and connections. Look for sharp
	not making contact?	bends in wires and places where wire is against
		the metal chassis.
Unit keeps tripping	Inadequate wire size ran to machine.	Call electrician and install proper wire size for
breaker.		electrical service versus length or run.
	Wrong size breaker.	Install correct breaker (only if wire size is
		adequate to handle breaker).
-	Inadequate wire size ran to machine.	Call electrician and install proper wire size for
blowing.		electrical service versus length or run.
	Motor brushes may be bad or too short.	Replace motor brushes.
Lack of vacuum suction.	Vac hose clogged?	Clean debris from vac hose.
	Filter bags need cleaned or dirt chamber needs emptied?	Shake or clean filter bags or replace and empty
		lower dirt chamber.
	Vac hose is split?	Replace/repair vac hose.
	Cleanout door gaskets torn or worn?	Replace gaskets.
	Vac motor gaskets are worn or motor is not tight against.	Inspect/replace gaskets and assure motor is
		tight against them.
	Dual vac hose unit, both hoses are being used.	When both hoses are being used, suction will
		be lower. Double check all 3 motors are
		working however.
	Lower chamber cap plugs/mounting hole covers have	Open lower chamber and inspect plugs, order
	popped out?	new if needed.
	Cleanout door gaskets torn or worn?	Replace gaskets.
	One of the vac motors is not working?	Check line motor fuse and replace. Replace
		motor if necessary.

9217LD-DH

NOTES: SET TIMER TO ACCUMULATING. 2. PLACE INLET 2. PLACE INCL.

COVER IN MANUAL

		BILL OF MATERIALS				BILL OF MATERIALS
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION
47	9217-JEA	TIMER ASY, JEA, CV POST MOUNT	1	1	2036	HOSE, 2" X 15' BLACK VACUUM
48	9217 3	WIRING DIAGRAM	X	2	5600D4	3/8-16 X 1.5 HHCS
	MOTOR SSAC			3	5601D13	1/4-20x1/2 SERR HEAD - STAINLE
	8149 IMONEX			4	5603D1	10 Std NC Nylock Nut
49	9900-6A	BRACKET COVER ASSEMBLY	1	5	5603D11	1/2 Std NF Nylock Nut
50	B5722-002	NUT, 3/8-16 UNC HEX LOCK NUT	4	6	5603D3	NUT, 3/8-16 Nylock, SS
		9		7	5606D22	WASHER, 3/8 FENDER

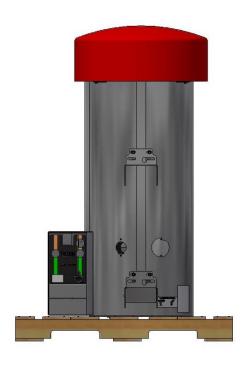

	2	200004	3/8-10 X 1.5 HHCS	4
	3	5601D13	1/4-20x1/2 SERR HEAD - STAINLESS	4
	4	5603D1	10 Std NC Nylock Nut	2
	5	5603D11	1/2 Std NF Nylock Nut	1
	6	5603D3	NUT, 3/8-16 Nylock, SS	4
	7	5606D22	WASHER, 3/8 FENDER	8
	8	5606D7	FLAT WASHER, .160 ID X .500 OD	1
	9	5627D2	SCREW 6-32 x .63 PD, PH, MS	1
	10	5640D1	1/4-20 x 1/2 PHIL PAN HEAD SCREW	2
	11	5647D2	1/8 SS POP RIVET	16
	12	5647D8	3/16 SS POP RIVET	14
	13	5702D6	3/8-16 X .75 TORX SEC. T-45	8
	14	5871b8	PLUG, VAC BOTTOM 2-1/2"	8
	15	5900D5	TERM, F SPADE, 3/16, 22-18 AWG INS.	2
	16	5901D1	WIRE NUT, YELLOW	1
	17	5901D2	WIRE NUT, RED	2
	18	6082	BAG, 9 X 12	1
,	19	8047	BAG, 60 X 72	1
1	20	8055EM	MOTOR, ELECTRO 120V	3
1	21	8057	MOTOR GASKET	3
1	22	8076	FILTER BAG	4
		8081	CABLE TIE MOUNT	3
1	24	8084	CABLE TIE	8
	25	8108	#10 x 1/2 TAP SCREW	6
1	26	8149	IMONEX COIN ACCEPTOR	1
1	27	8153-1	LATCH, CLEANOUT DOOR	4
1	28	8157	NUT, #6-32 KEPP NUT STAINLESS	5
1	29	8159	DOOR GASKET	2
1	30	8183	DECAL, "DISCONNECT POWER"	1
1	31	8204RW	COIN BOX, PIN LOCK WELDMENT	1
:	32	8211RW	FACEPLATE WELDMENT, R.H	1
;	33	8306	24" PLASTIC DOME	1
1	34	8427-1	DECAL, CANISTER	1
1	35	8543K-3	3 MOTOR LIGHT KIT	1
1	36	8615-5W ^	CLEANOUT DOOR WELDMENT	2
[;	37	8619-6 /F	PLATE, VAC INLET COVER	1
	38	8631	11 X 55 PAD FOR VACS	1
1	39	8638	PIN LOCK	2
-	40	8712-C1-2	CABLE ASSEMBLY, COIN/CC, 66"	1
		8732	NAMEPLATE SERIAL TAG, UL	1
-	42	8754	DECAL, WARNING CANISTER	1
-	43	8925	FLOURESCENT BULB	3
-	44	8939	PALLET, DUAL, OVAL, SPECIAL, 30X40	1
-	45	9200FPD	DECAL, FACEPLATE	1
	46	9214W-DH	VAC CAN W/C, 3MTR, DH, POST MNT	1


QTY

1

4

F	8883	ADD INLET COVER TO BOM, PLACE IN MANUAL BAG	06/13/22	JRF	TITLE
E	8827	REMOVED 8055LEAD-EM, B5997-001, B5996-010. THESE ARE NOW IN TIMER ASSEMBLY	2/9/22	MWS	3 MC
D	8798	REPLACE 9217SS5 WITH 9217-JEA, ADD 8712-C1-2 CABLE	1/18/22	MWS	UNSPECIFIED
С	7723	REMOVE 2081 COUPLER & 8061-720-8 CLAMP	033016	JF	1 PL ± .030
В	7588	REPLACE 5636D1 WITH 5640D1, ADD WIRING DIAGRAM	101315	JF	2 PL ± .020
REV	NO.	DESCRIPTION	DATE	BY	3 PL ± .003
THIS	S DOCUMENT SHALL N	OT BE REPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E. ADAMS I	NDUSTRIES		ANGLE ± 1°

MOTOR VAC, 2 DOOR, DUAL HOSE, POST MOUNT CEDAR RAPIDS, IOWA JOHN F 30 10/13/2014 SHEET 9217LD-DH 1/2

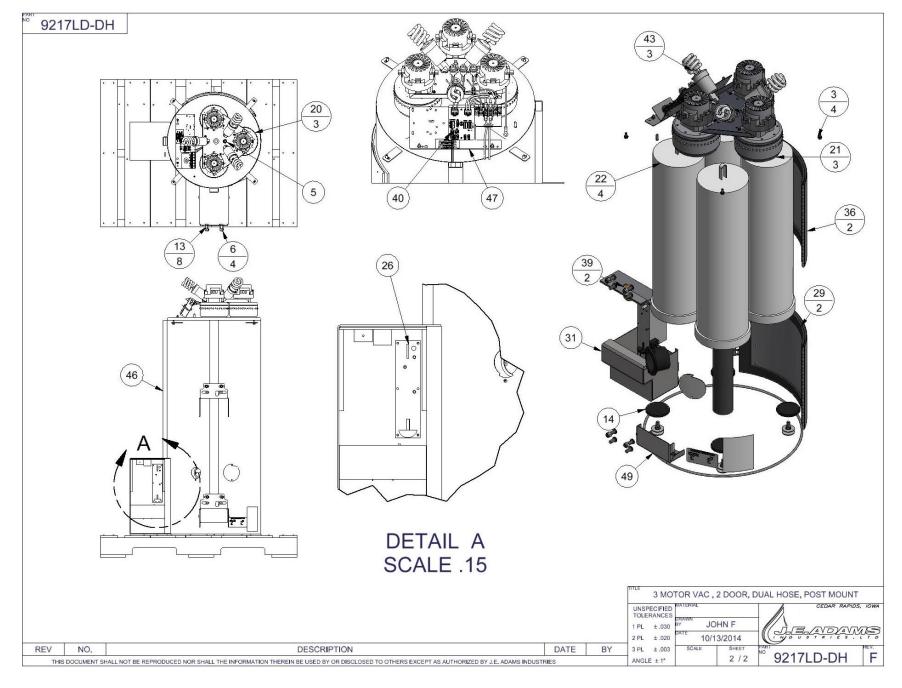

BILL OF MATERIALS BILL OF MATERIALS 9218LD-DH ITEM PART NUMBER DESCRIPTION QTY ITEM PART NUMBER DESCRIPTION NOTES: HOSE, 2" X 15' BLACK VACUUM 36 8543K-3 3 MOTOR LIGHT KIT 1 1 2036 1. ROUTE (3) 10GA WIRES (BLK, WHT, GRN) DOWN WIRE CHASE, 37 8939 PALLET, DUAL, OVAL, SPECIAL, 30X40 5600D4 COIL WIRES UNDER COVER. 1 2 3/8-16 X 1.5 HHCS 2. GREEN 10GA WIRE (PART OF ITEM 32) SECURE UNDER ITEM 9. 38 8615-5W CLEANOUT DOOR WELDMENT 2 3 5601D13 1/4-20x1/2 SERR HEAD - STAINLESS 3. GREEN/YELLOW WIRE (ITEM 47) WITH ITEM 39 CRIMPED ON ENDS, GROUND WIRE BETWEEN BOTTOM CONTROL BOX AND UPPER TIMER 39 8619-6 PLATE, VAC INLET COVER 1 4 5603D1 NUT #10-24, NYLOCK, SS ASSEMBLY. 40 8630 BOX, 34 X 32 X 60-1/8 5603D10 NUT NYLOCK, #6-32, SS 1 5 4. SEE 9218-JEAPBKIT FOR SUPPLEMENTAL PARTS TO ADD KEYED FREE VEND OPTION. 41 8638 PIN LOCK 1 6 5603D11 1/2 Std NF Nylock Nut 5. SEE S9218-CM-BA-JEA FOR SCHEMATIC. 42 8673-11 **GROUND WIRE 28"** 5603D3 1 7 3/8-16 Std NC Nylock Nut 6. SLIDE LOCK BAR AVAILABLE, SEE 8206-BEL. 7. SET TIMER FOR ACCUMULATING. 43 8712-B1-2 CABLE ASY, BILL VAL, 66' 1 5606D22 WASHER, 3/8 FENDER 8 8. PLACE INLET COVER WITH MANUAL. 44 8712-C1-2 CABLE ASSEMBLY, COIN/CC, 66" 1 9 5606D7 FLAT WASHER, .160 ID X .500 OD 45 8732 NAMEPLATE, PRODUCT SPECS 1 5627D2 SCREW 6-32 x .63 PD, PH, MS 10 46 8754 WARNING DECAL 1 11 5640D1 1/4-20 x 1/2 PHIL PAN HEAD SCREW 47 8925 FLOURESCENT BULB 3 12 5647D2 1/8" SS POP RIVET 48 8953 MEDECO CAM LOCK W/2 KEYS 2 13 5647D8 3/16" SS POP RIVET 49 8957VS COIN CHUTE, SCENT VAC 1 14 5702D6 3/8-16 X .75 TORX SEC. T-45 50 5871b8 PLUG, VAC BOTTOM 2-1/2" 9200-1D-1-10 DECAL, FACEPLATE 1 15 51 9200-1D-1-10-BA 5900D5 DECAL, INSERT BILL 1 16 TERM, F SPADE, 3/16, 22-18 AWG INS. 52 9209-2W FACEPLATE WELDMENT, SHAMPOO 1 17 5901D1 WIRE NUT, TWIST, YELLO 53 9214W-3DH VAC CAN WMT, 3M, DH, POST MNT 1 18 5902D1 TERM, RING, #10, 14-16AWG, INS. 54 9217-JEA TIMER ASY, JEA, CV POST MOUNT 1 19 5943D322C WIRE, 14 AWG, MTW, 90C, GRN/YLW 55 9900-6A BRACKET COVER ASSEMBLY 20 8055EM MOTOR, ELECTRO 120V 56 B5722-002 NUT, 3/8-16 UNC HEX LOCK NUT 4 21 8057 MOTOR GASKET 8076 FILTER BAG 22 23 8081 CABLE TIE DOWN, SELF ADHESIVE 24 8089 CABLE CLAMP, PLASTIC, 1/2" ID 25 8108 #10 x 1/2 TAP SCREW 26 8130-6 MEI MARS, 110V BILL VALIDATOR 27 8149 IMONEX COIN ACCEPTOR 28 8153-1 LATCH, CLEANOUT DOOR 29 8157 NUT, #6-32 KEPP NUT STAINLESS 30 8159 DOOR GASKET 31 8183 DECAL, "DISCONNECT POWER" 32 8204RW COIN BOX, PIN LOCK WELDMENT 33 8306 24" PLASTIC DOME 34 8400-1 DECAL PRICING CIRCLE SET YEL 35 8427-1 DECAL, CANISTER

QTY

1

4

4

3

9

1

4

8

1

1

2

16

14

8

5

2

4

2

48"

3

3

4

1

1

1

1

1

2

1


1

1


1


1

J	8935	8939 WAS 8605-2	10/6/22	BJL			M,POST M	NT, LEFT, BA, DH, LD	
Н	8883	ADD INLET COVER TO BOM, PLACE IN MANUAL BAG	06/17/22	JRF	UNSPECIFIED	MATERIAL		CEDAR RAPI	PIDS, IOWA
G	8827	REMOVED 8055LEAD-EM, B5997-001, B5996-010. THESE ARE NOW IN TIMER ASSEMBLY	2/9/22	MWS	1 PL ± .030	DRAWN BY			
F	8798	REPLACE 9217SS5 WITH 9217-JEA, 9500-56L WITH 8721-B1-2, ADD 8712-C1-2	1/18/22	MWS	2 PL ± .020	1/29	9/2016		Wite
REV	NO.	DESCRIPTION	DATE	BY	3 PL ± .003	SCALE	SHEET	PART NO COLOL D D.	REV.
THIS	S DOCUMENT SHALL	L NOT BE REPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E. ADAMS IN	DUSTRIES		ANGLE ± 1°	0.06 : 1	1/2	9218LD-DH	J

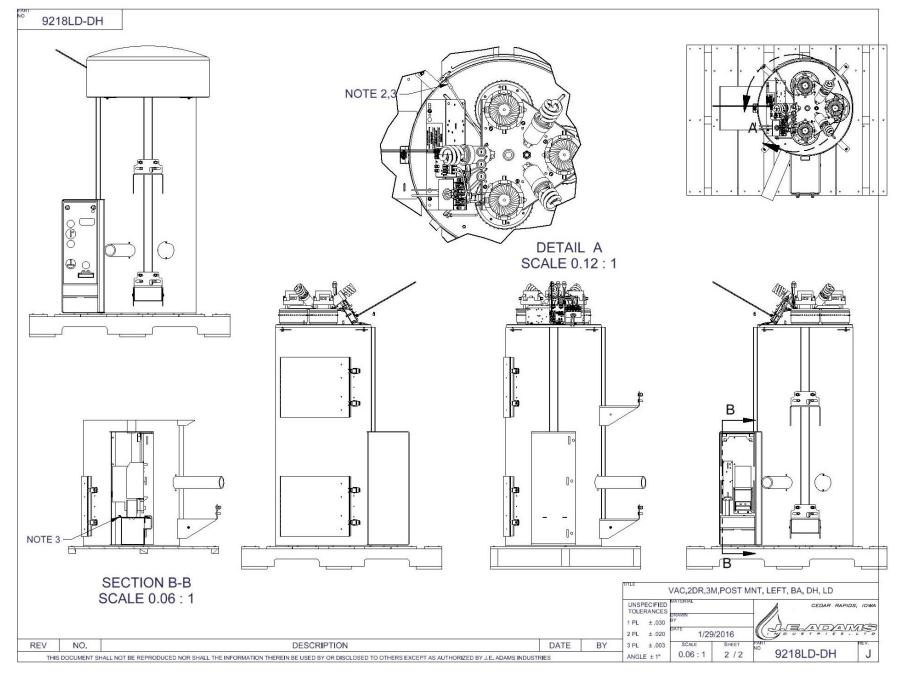

16 REV 2-17-25

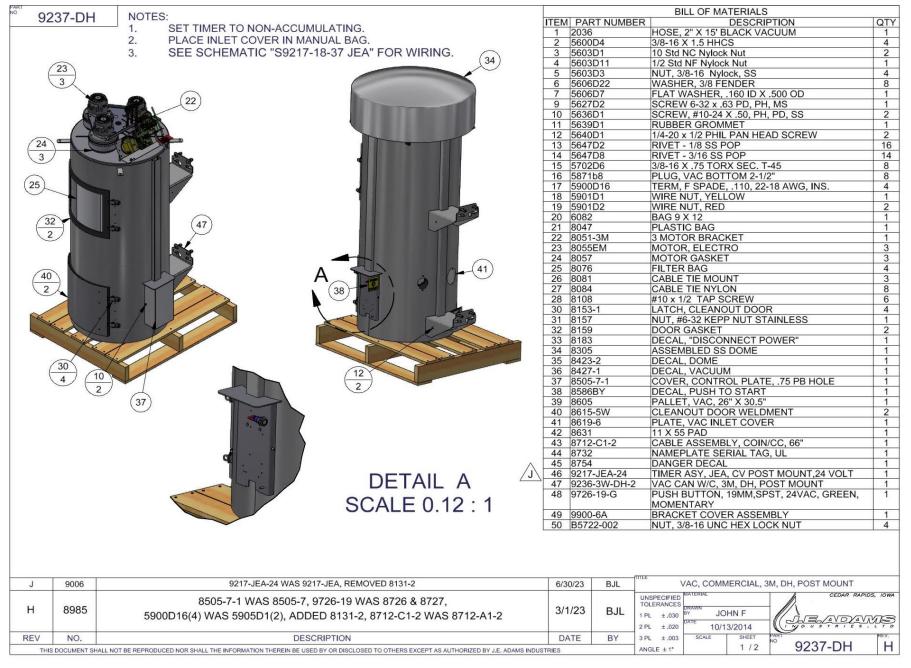

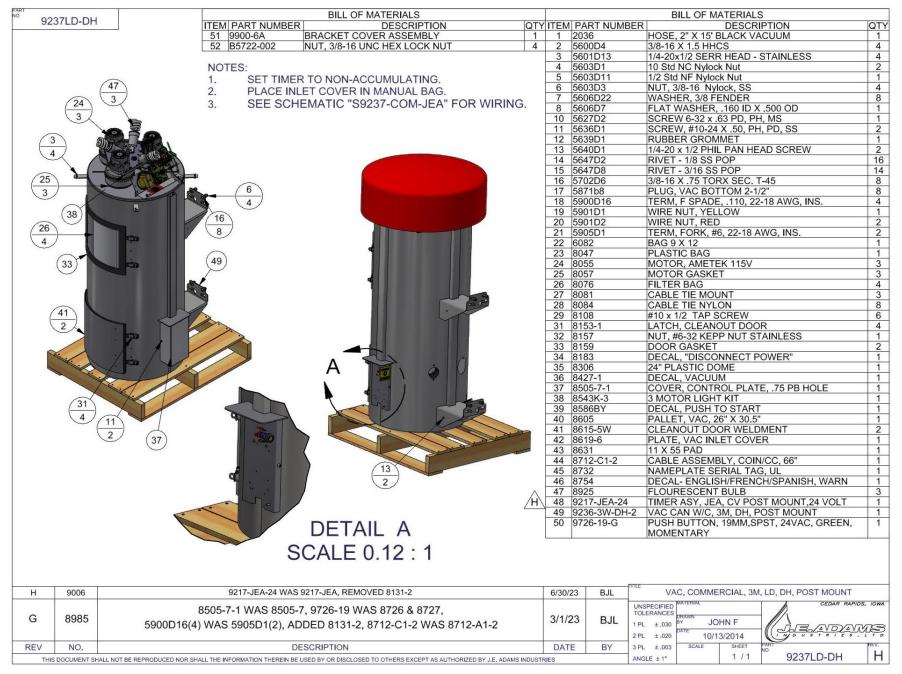


9217LD-DH-220

NOTES:

1. SET TIMER TO ACCUMULATING.

2. PLACE INLET
COVER IN MANUAL
BAG.

		BILL OF MATERIALS				BILL OF MATERIALS	
ITEM	PART NUMBER	DESCRIPTION	QTY	ITEM	PART NUMBER	DESCRIPTION	QTY
34	8427-1	DECAL, CANISTER	1	1	2036	HOSE, 2" X 15' BLACK VACUUM	1
35	8543K-3	3 MOTOR LIGHT KIT	1	2	5600D4	3/8-16 X 1.5 HHCS	4
36	8615-5W	CLEANOUT DOOR WELDMENT	2	3	5601D13	1/4-20x1/2 SERR HEAD - STAINLESS	4
37	8619-6 D	PLATE, VAC INLET COVER	1	4	5603D1	10 Std NC Nylock Nut	2
38	8631	11 X 55 PAD FOR VACS	1	5	5603D11	1/2 Std NF Nylock Nut	1
39	8638	PIN LOCK	2	6	5603D3	NUT, 3/8-16 Nylock, SS	4
40	8712-C1-2	CABLE ASSEMBLY, COIN/CC, 66"	1	7	5606D22	WASHER, 3/8 FENDER	8
41	8732	NAMEPLATE SERIAL TAG, UL	1	8	5606D7	FLAT WASHER, .160 ID X .500 OD	1
42	8754	DECAL- ENGLISH/FRENCH/SPANISH, WARN	1	9	5627D2	SCREW 6-32 x .63 PD, PH, MS	1
43	8925-220	FLOURESCENT BULB, 13W-230VAC, SPIRAL MINI	3	10	5636D1	SCREW, #10-24 X .50, PH, PD, SS	2
44	8939	PALLET, DUAL, OVAL, SPECIAL, 30X40	1	11	5639D1	RUBBER GROMMET	1
45	9200FPD	DECAL, FACEPLATE	1	12	5647D2	1/8" SS POP RIVET	16
46	9214W-DH	VAC CAN W/C, 3MTR, DH, POST MNT	1	13	5647D8	3/16" SS POP RIVET	14
47	9217-JEA-220	TIMER ASY, JEA, 220V CV POST MNT	1	14	5702D6	3/8-16 X .75 TORX SEC. T-45	8
48	9900-6A	BRACKET COVER ASSEMBLY	1	15	5871b8	PLUG, VAC BOTTOM 2-1/2"	8
49	B5722-002	NUT, 3/8-16 UNC HEX LOCK NUT	4	16	5900D14	TERMINAL, F SPADE, 3/16", 22-18AWG	2
	ė.		•	17	5900D5	TERM, F SPADE, 3/16, 22-18 AWG INS.	2
				10	6002	BAC 0 V 12	4

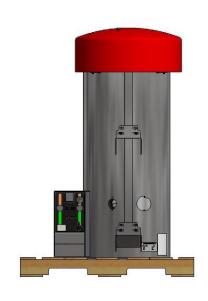

15	5871b8	PLUG, VAC BOTTOM 2-1/2"	8
16	5900D14	TERMINAL, F SPADE, 3/16", 22-18AWG	2
17	5900D5	TERM, F SPADE, 3/16, 22-18 AWG INS.	2
18	6082	BAG, 9 X 12	1
19	8047	BAG, 9 X 12	1
20	8055AE-220V	ELECTRO MOTOR 220V	3
21	8057	MOTOR GASKET	3
22	8076	FILTER BAG	4
23	8081	CABLE TIE MOUNT	3
24	8084	CABLE TIE	8
25	8108	#10 x 1/2 TAP SCREW	6
26	8149	IMONEX COIN ACCEPTOR	1
27	8153-1	LATCH, CLEANOUT DOOR	4
28	8157	NUT, #6-32 KEPP NUT STAINLESS	5
29	8159	DOOR GASKET	2
30	8183	DECAL, "DISCONNECT POWER"	1
31	8204RW	COIN BOX, PIN LOCK WELDMENT	1
32	8211RW	FACEPLATE WELDMENT, R.H	1
33	8306	24" PLASTIC DOME	1

D	8883	ADD INLET COVER TO BOM, PLACE IN MANUAL BAG	06/13/22	JRF	\ \	/AC , 3M, E	UAL HOSE	, POST MOUNT, 220V
С	8825	REPLACE 9217SS5-220 WITH 9217-JEA-220, ADD 8712-C1-2	2/3/22	MWS	UNSPECIFIED TOLERANCES	MATERIAL		CEDAR RAPIDS, IOWA
В	8047	REMOVED 2081 AND 8061-720-8	7-17-17	CAK	1 PL ± .030	DRAWN BY CH	IAD K.	
Α	7908	REMOVED 5911D3 AND 5911D4; ADDED 8925-220	12-22-16	CK	2 PL ± .020	DATE 11/1	0/2016	(John AVDYAVMIS
REV	NO.	DESCRIPTION	DATE	BY	3 PL ± .003	SCALE	SHEET	PART REV.
THIS	DOCUMENT SHALL NOT BE RE	EPRODUCED NOR SHALL THE INFORMATION THEREIN BE USED BY OR DISCLOSED TO OTHERS EXCEPT AS AUTHORIZED BY J.E.	ADAMS INDUSTRIES		ANGLE ± 1°	1/20	1/2	9217LD-DH-220 D

